


STARTENT MANUAL


Recommended: 2 people for setup process

1 Center pin

A Determine center point

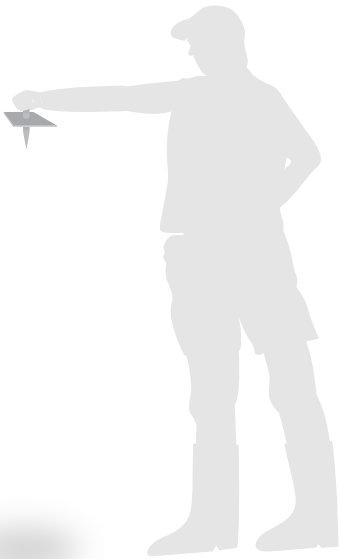

B Place center pin

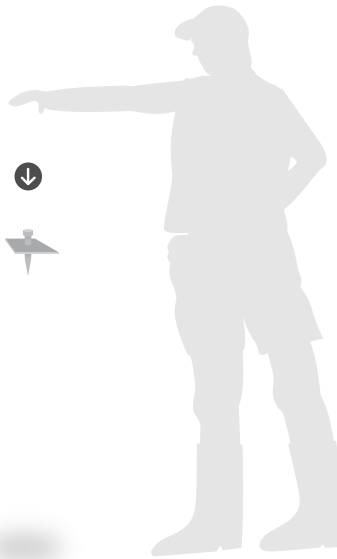


C Make sure center pin is sturdy



2 Measure pin positions

A Attach center loop to center pin

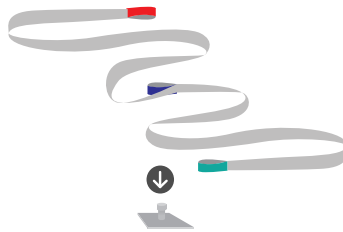


 *5cm


B Stretch single arm and place pin




C Attach outer end to center pin, stretch cord and place pin in center loop.

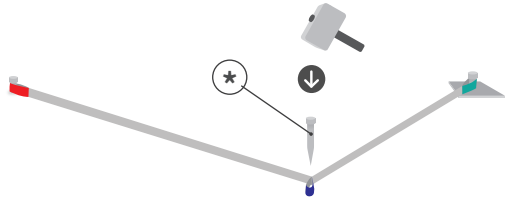


C Remove both loops attached to pins and attach outer end to latest placed pin, stretch cord and place new pin in center loop.

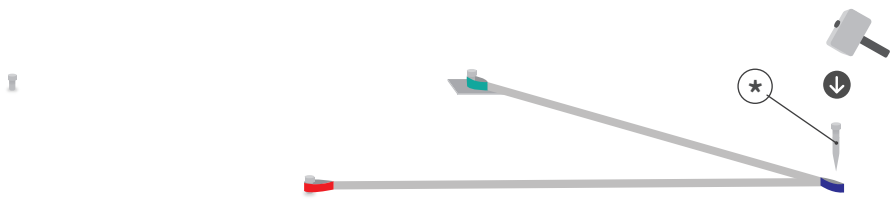


D Repeat previous step

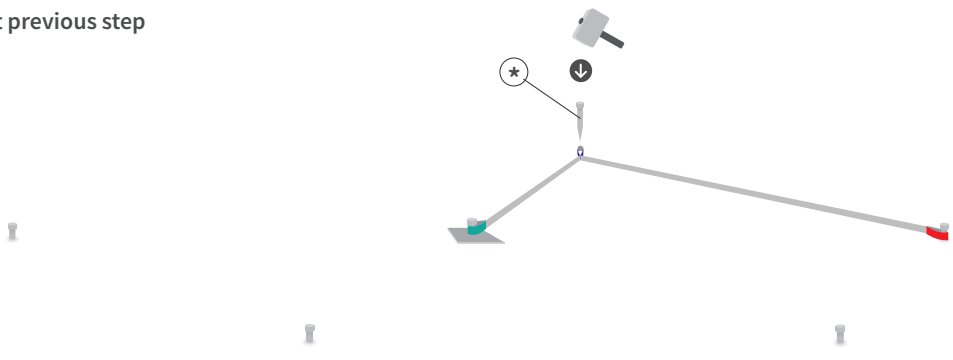


E Repeat previous step

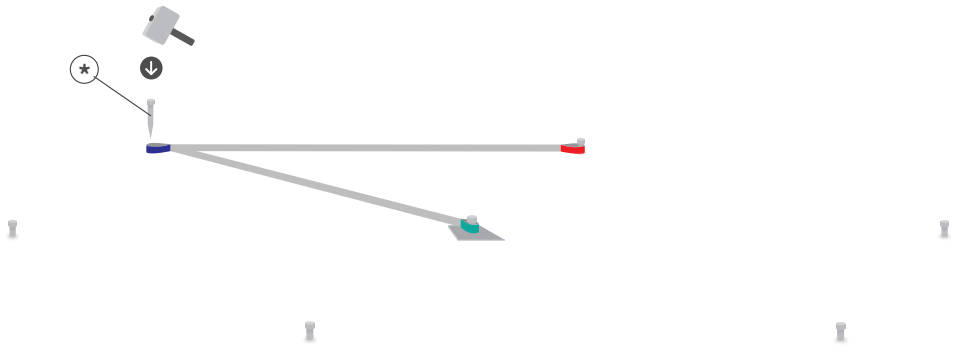

F Result

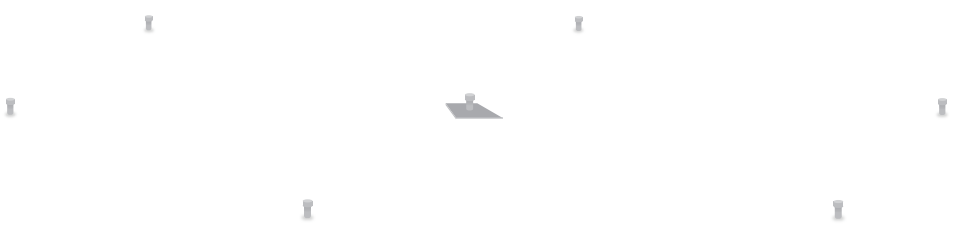


3 Place protective canvas on one side of the center pin

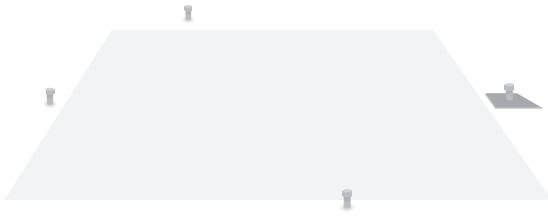

4 Place tent on protective canvas


*1 Point tent tip away from center

*2 Attach pins closest to tip

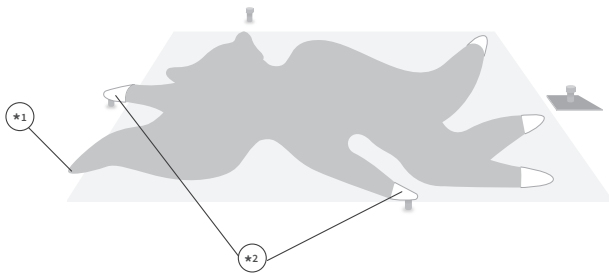


5 Assemble pole


Pole consists of 5 pieces, 1 base, 3 shafts and 1 top

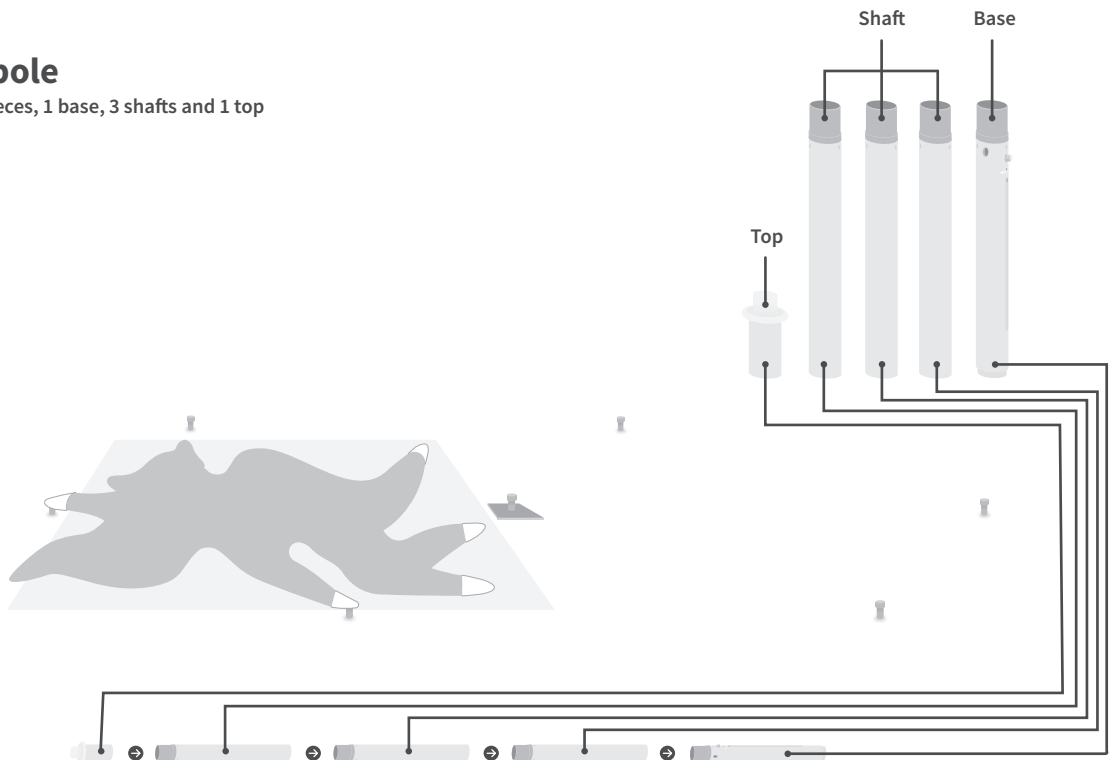


6 Pick up pole, go under the sail and attach the poletop to tent top ring.

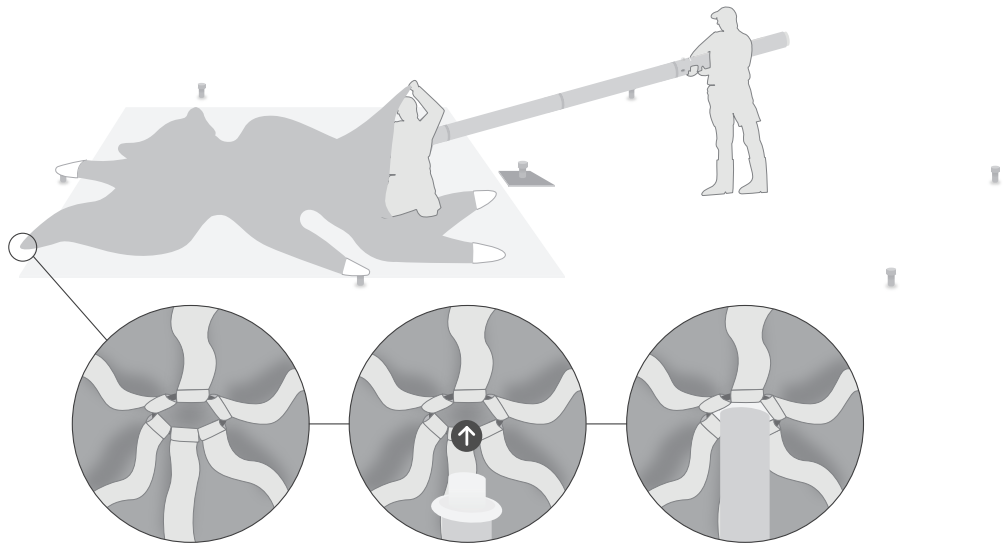

7 Pull tent upright and attach remaining pins

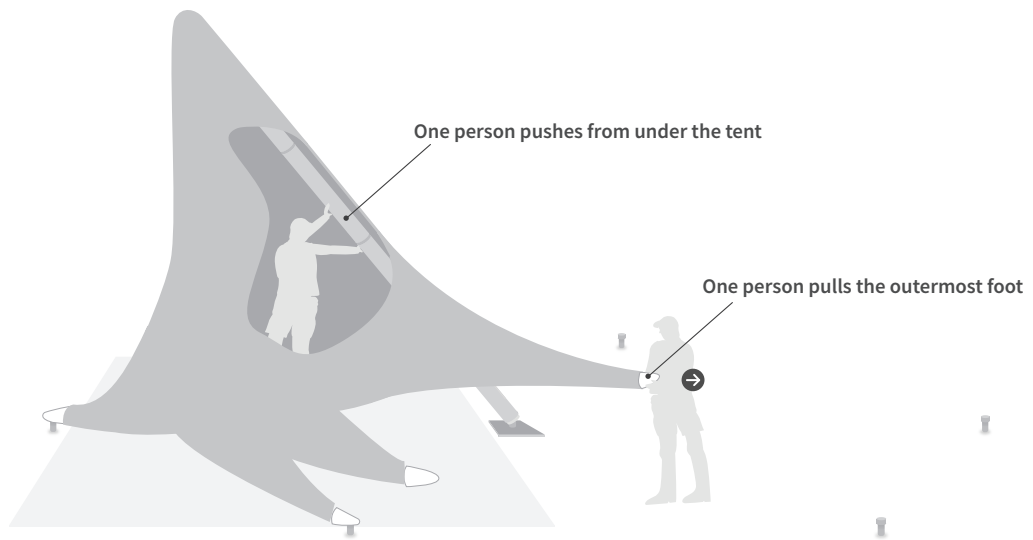

8 Attach handle and turn clockwise to increase pole pressure

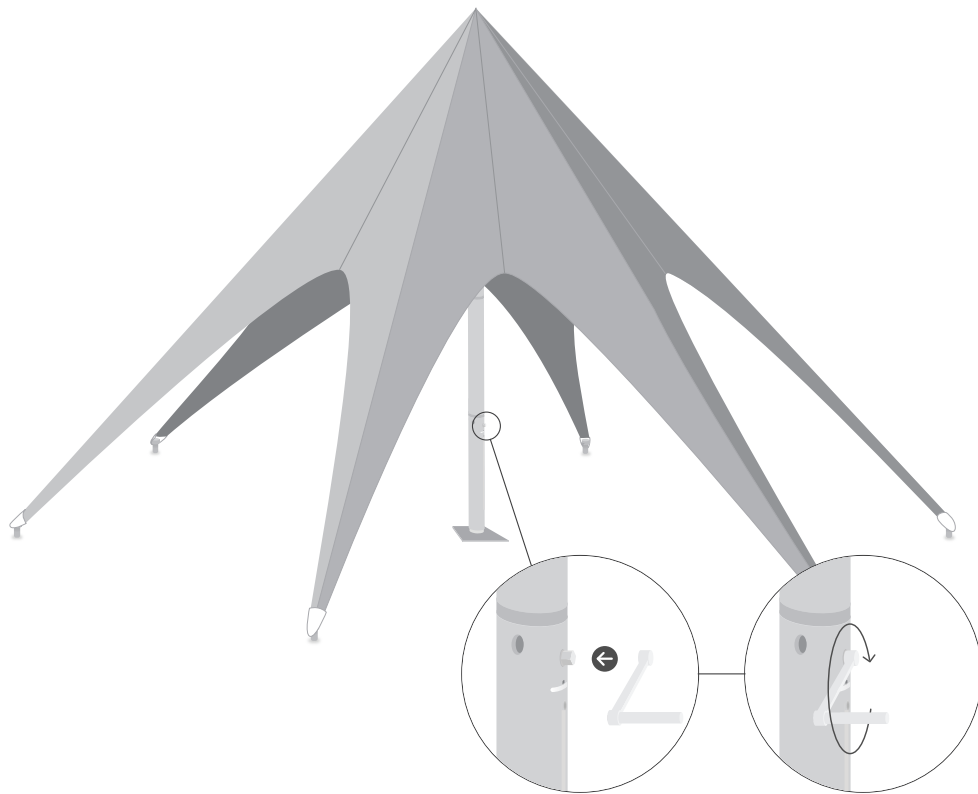

9 Result

